


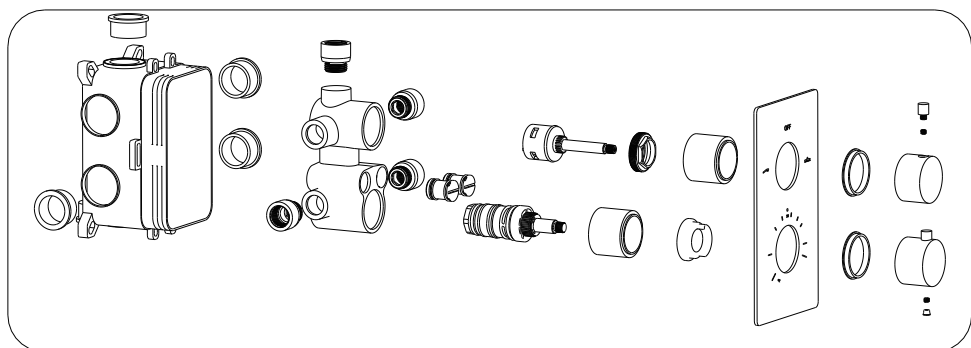


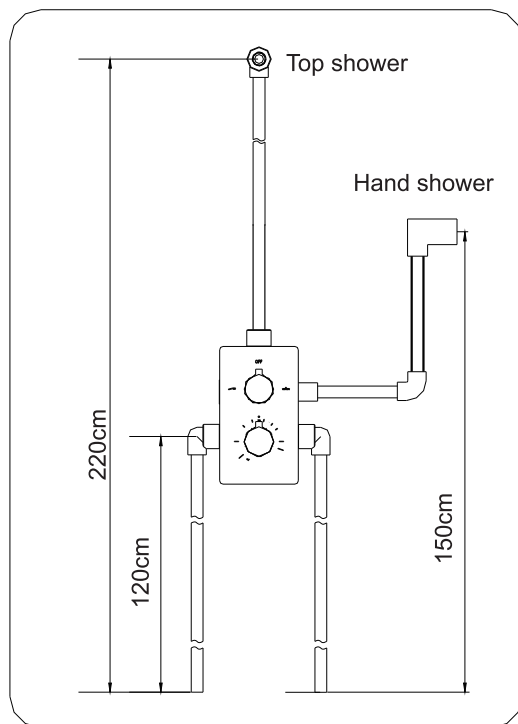


Thermostatic Mixer Installation Manual

CR5287-7C/CR5287-7MB
CR5287-7BC/CR5287-7BG
CR5287-7GG

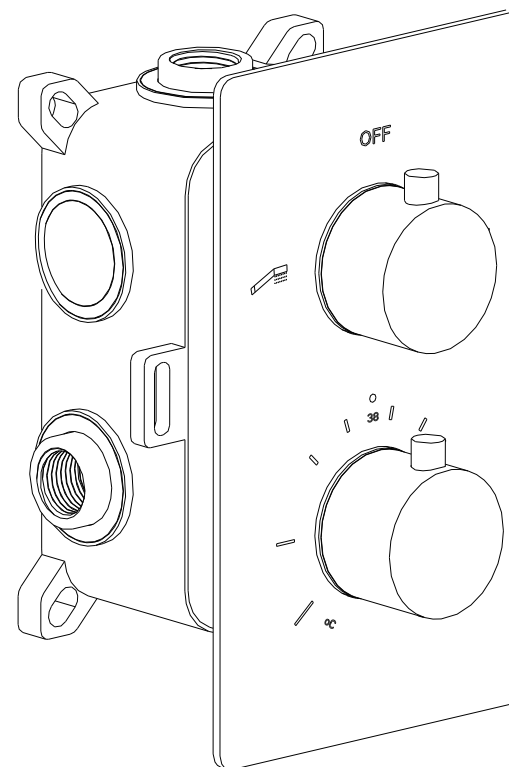


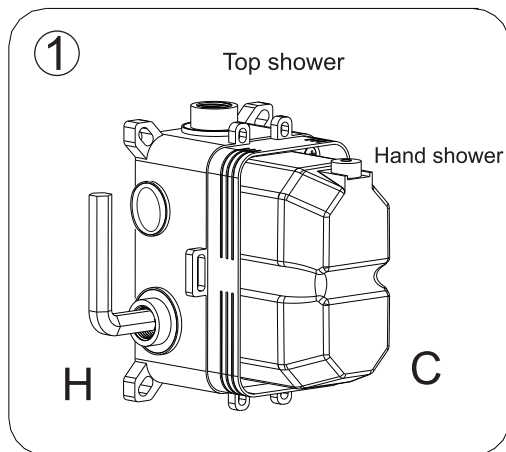


First, find four extension joints, and tighten clockwise with four interfaces on both sides.

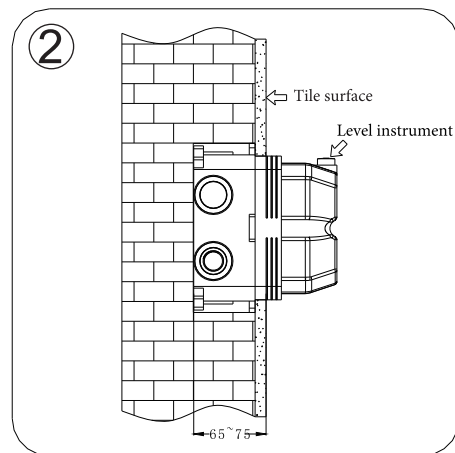


Open the main hole on the solid wall according to the basic dimensions of the embedded box. The depth of the hole is 65 to 75MM.

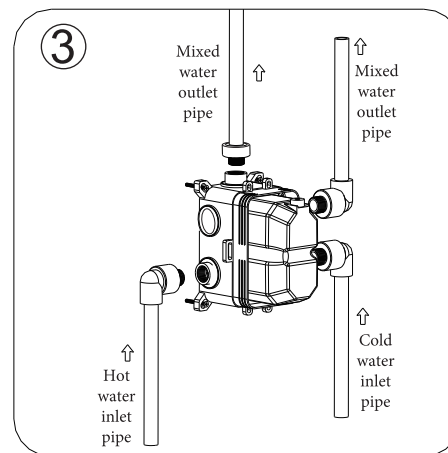


As shown in the picture, the lower left joint is connected to the hot inlet water pipe, the lower right joint is connected to the cold inlet water pipe, the top joint is connected to the top shower outlet pipe, and the upper right joint is connected to the hand shower outlet pipe.

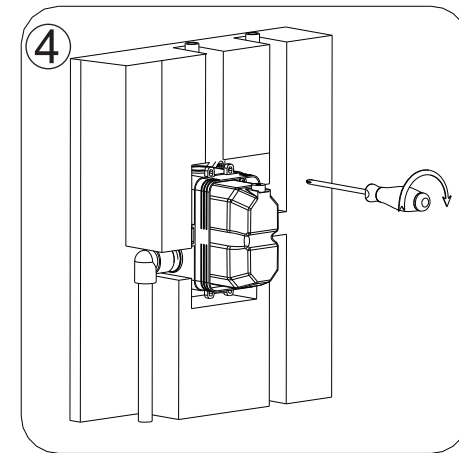


Open the water switch to test whether the left and right inlet pipes are connected tightly and without leakage. And then adjust the flow switch to test whether the outlet pipes are connected tightly and without leakage.

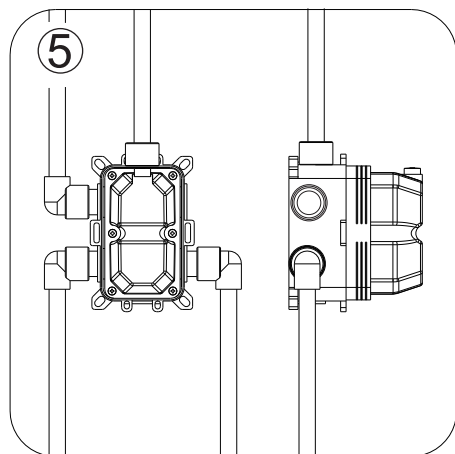


As shown in the picture, there is a embeded Level Gauge in the amounting cover, please adjust and intall the valve to be flat.

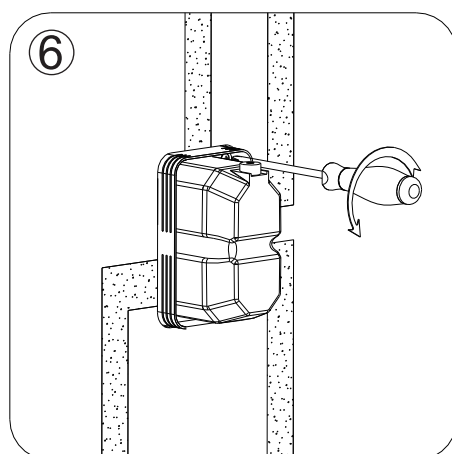

Make sure the pipe connection is correct, test the water without leakage, after the other embeded components of the shower are installed, fill the box and pipe into the wall, and then remove the mounting cover.

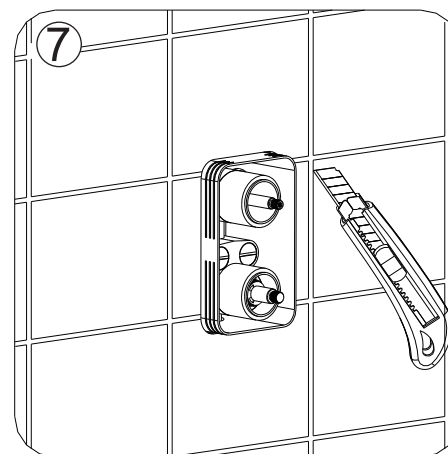

As shown in the picture, cut off the outer redundant embedded box.

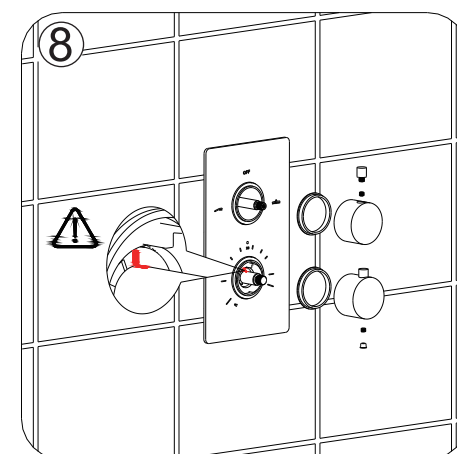

Install the switch handle, point to the red mark; use the small hex wrench to fix the switch handle clockwise on the main body of the control valve; put on the decorative cover.