


















INSTALLATION MANUAL

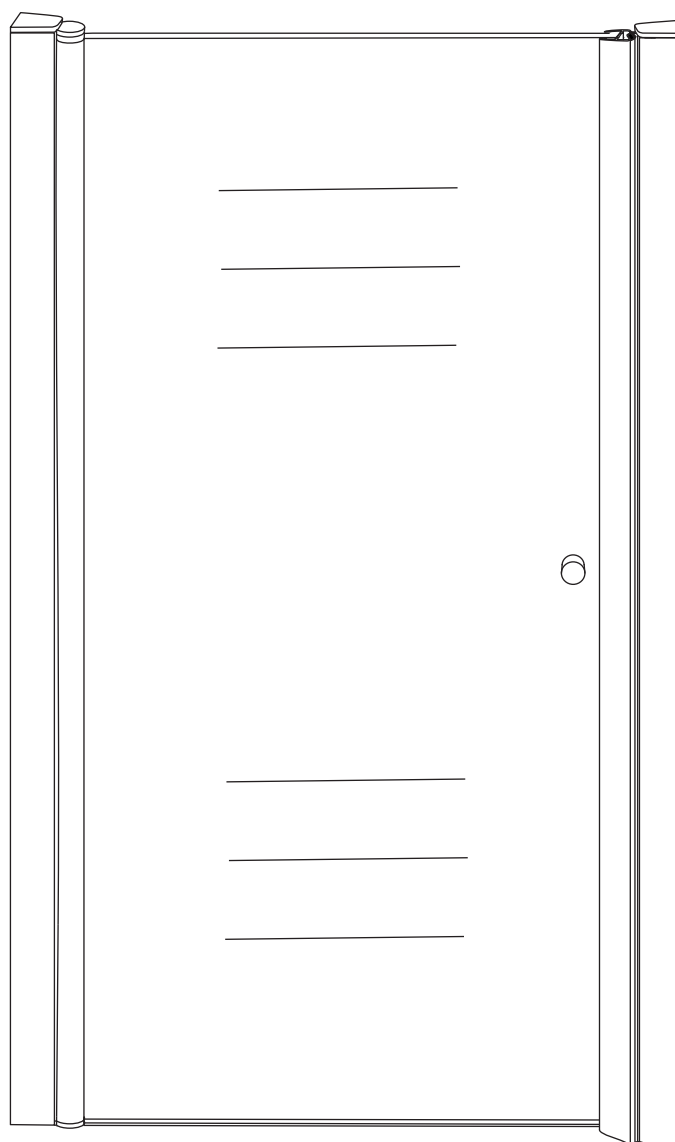


CR043-80
CR043-90
CR043-100





CE ISO9001:2015

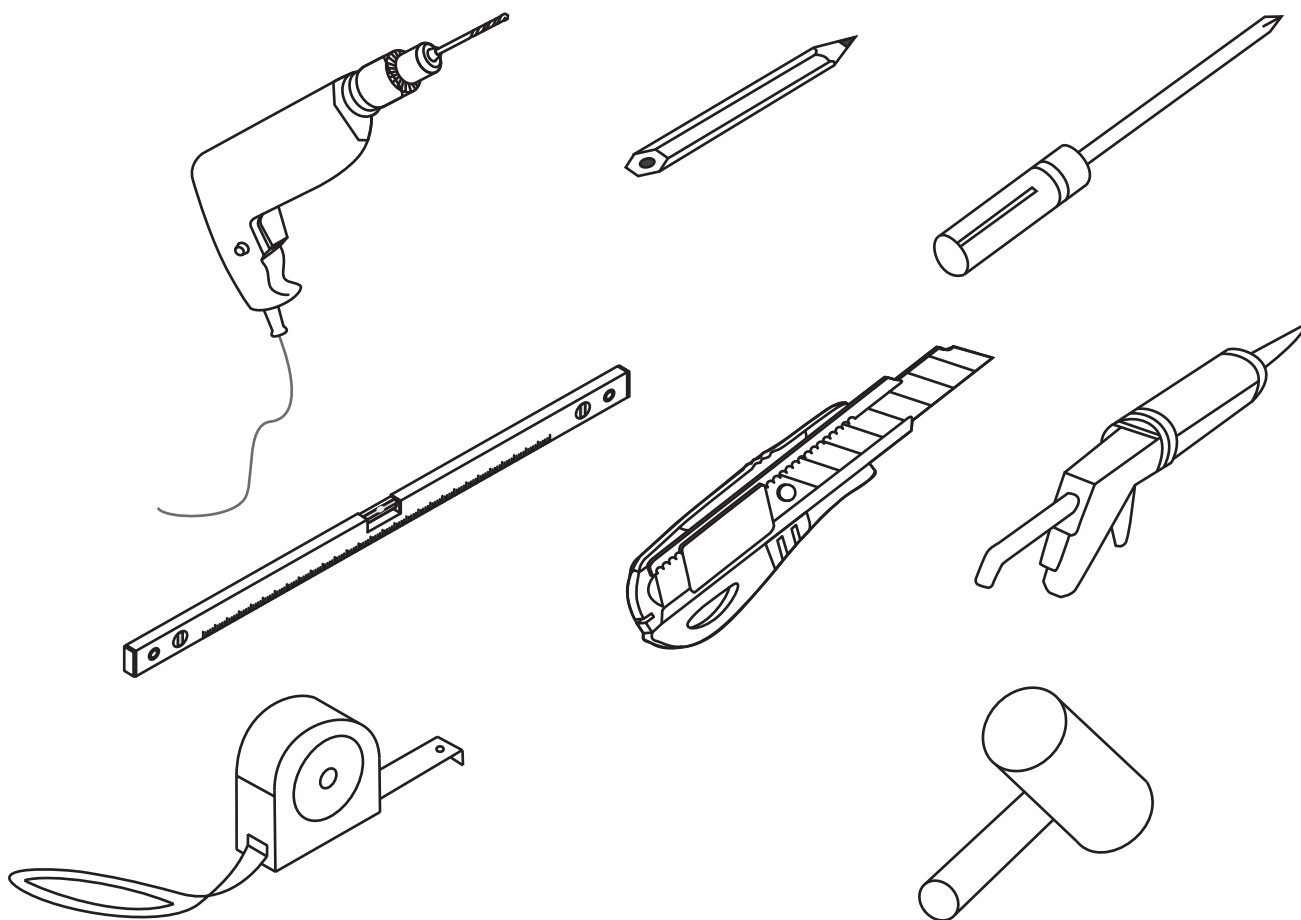

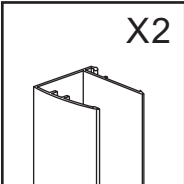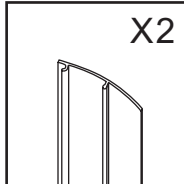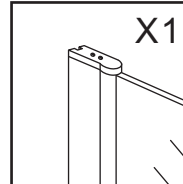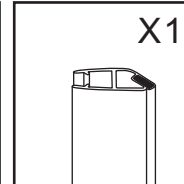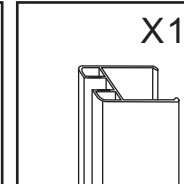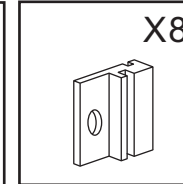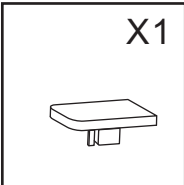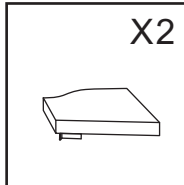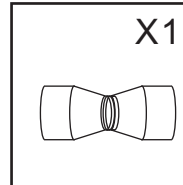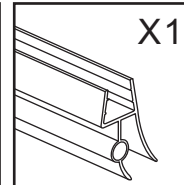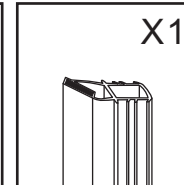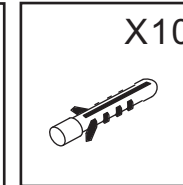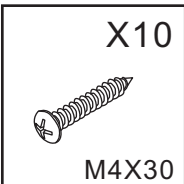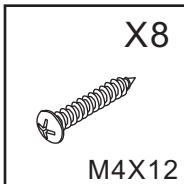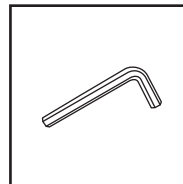 X2 KQ-07	 X2 BB-04	 X1 GLASS	 X1 6FX-2A	 X1 LJ-09	 X8 PJ-4729
 X1 PJ-4509	 X2 PJ-4514/15	 X1 LS-1201	 X1 6B-6-18	 X1 8mm inner magnet	 X10 PJ-4606
 X10 M4X30	 X8 M4X12				

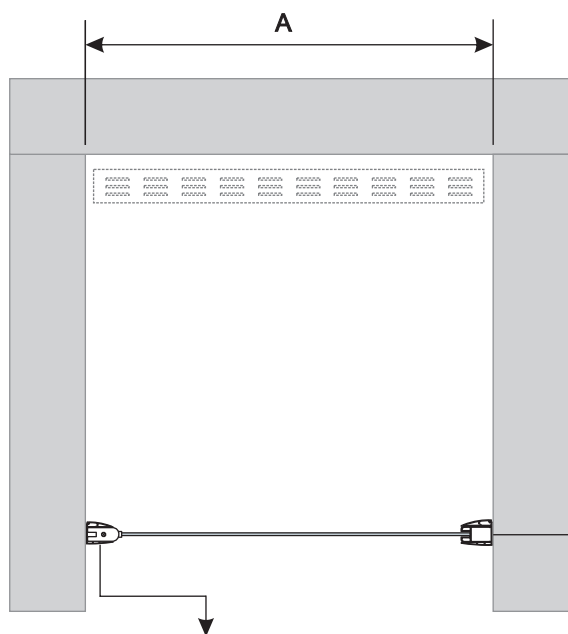








SIZE	A
800x1900	770-810
900x1900	870-910
1000x1900	970-1010

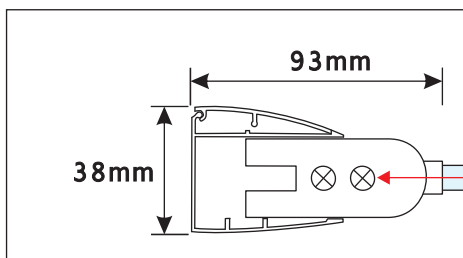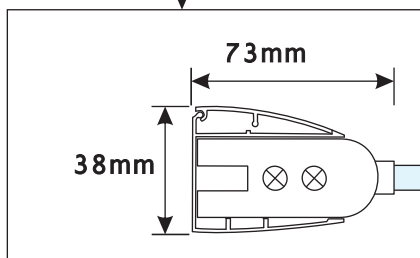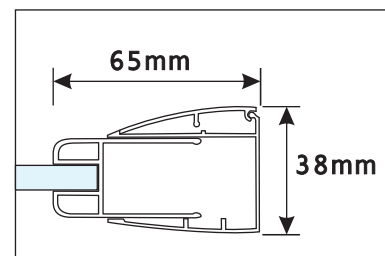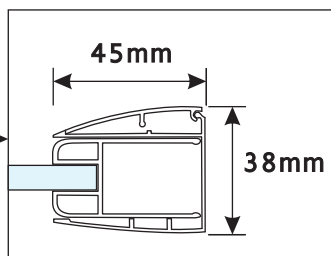

if you find the hinge could not swing so smoothly or blocked, pls try to loosen the screws and make sure all the profiles vertically and then fix well the screws again !


1

Install the wall profile: according the line to install the profile notice: put the profile in middle of line.

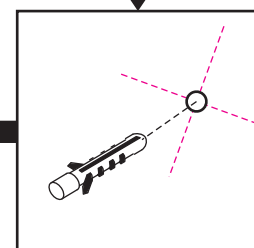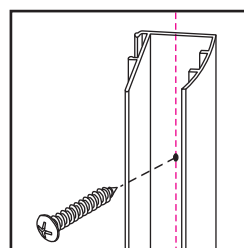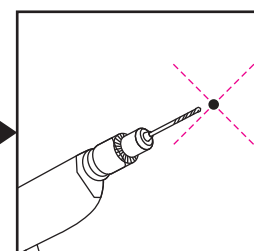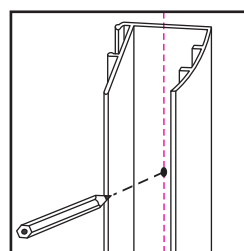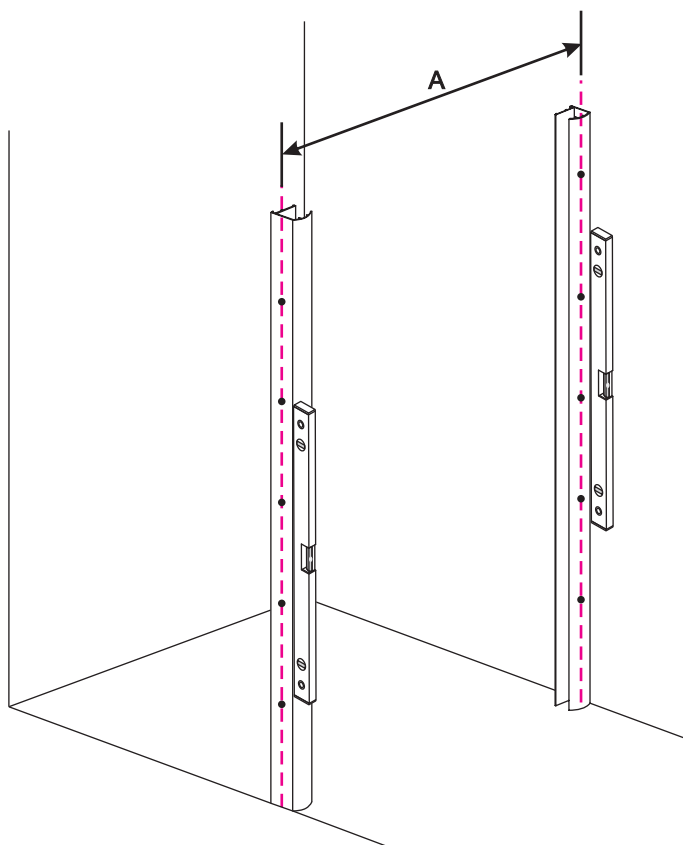


2

As the picture shows insert the magnetic stripe into profile attention please the put the magnetic stripe side outside.

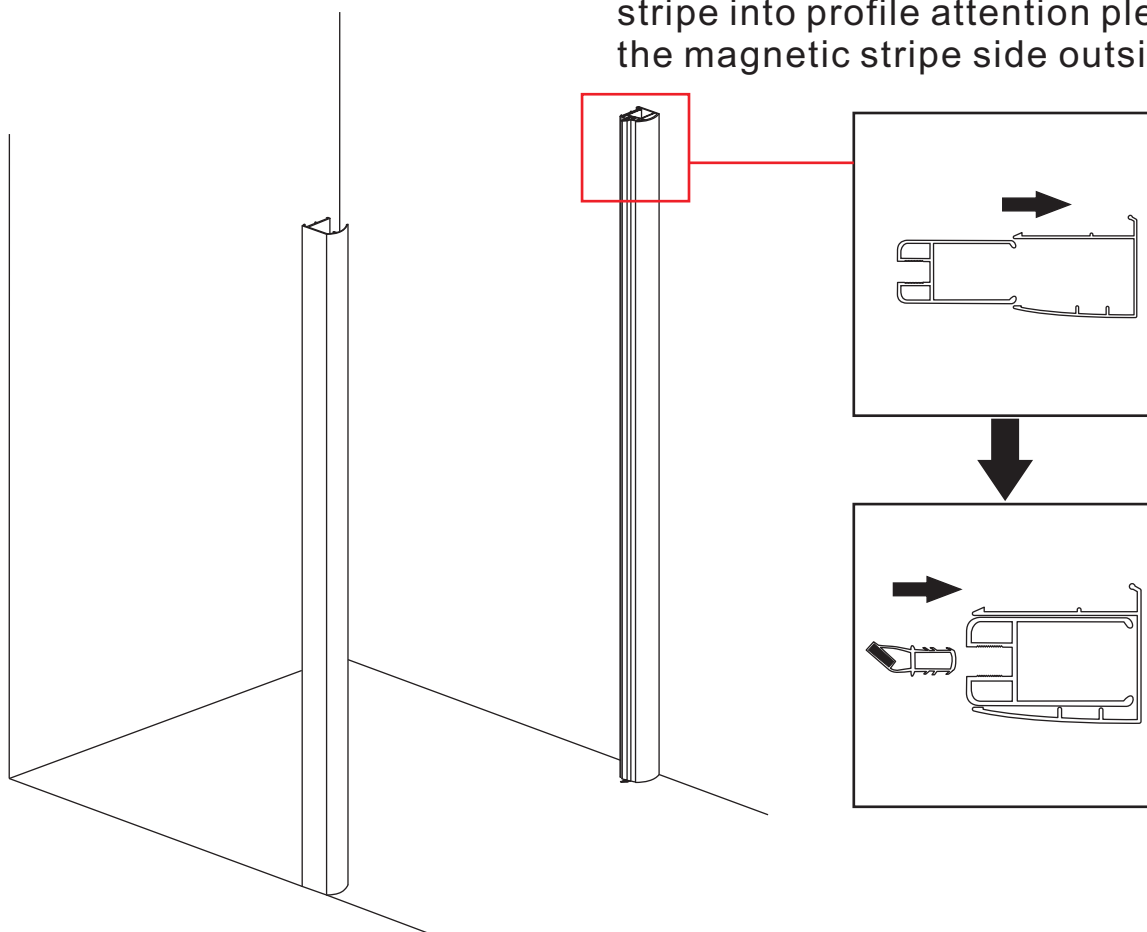


3

Install the water-proof gasket.

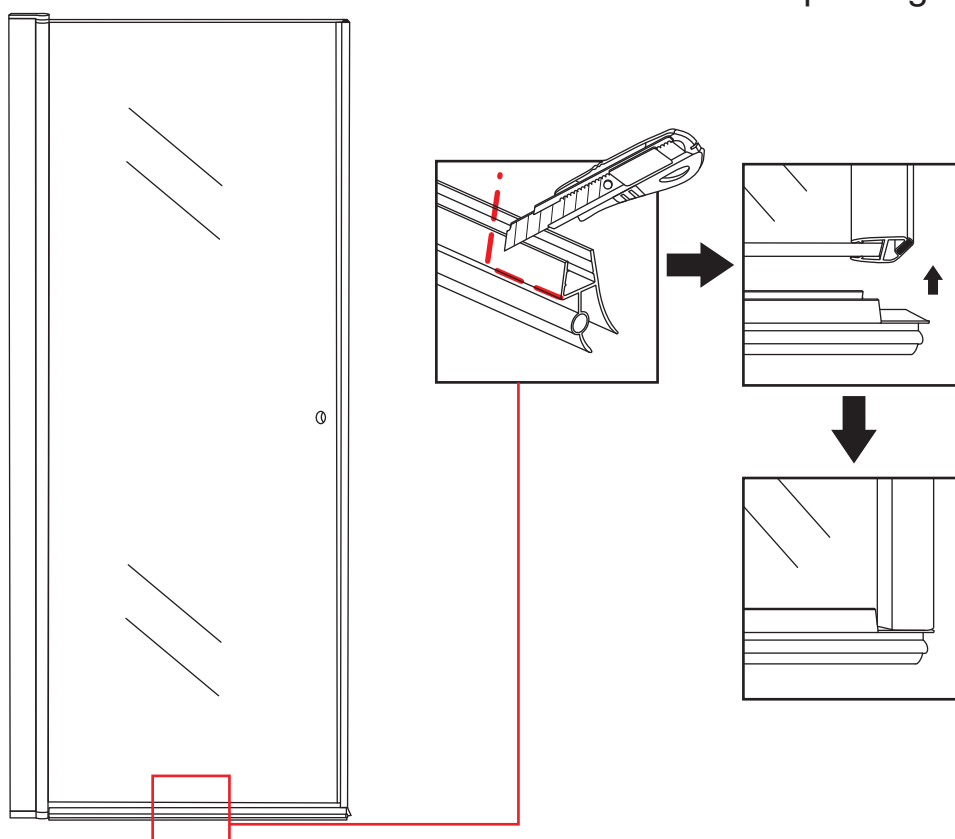


4

Install the door glass: insert the door glass into profile, then install the magnetic stripe.

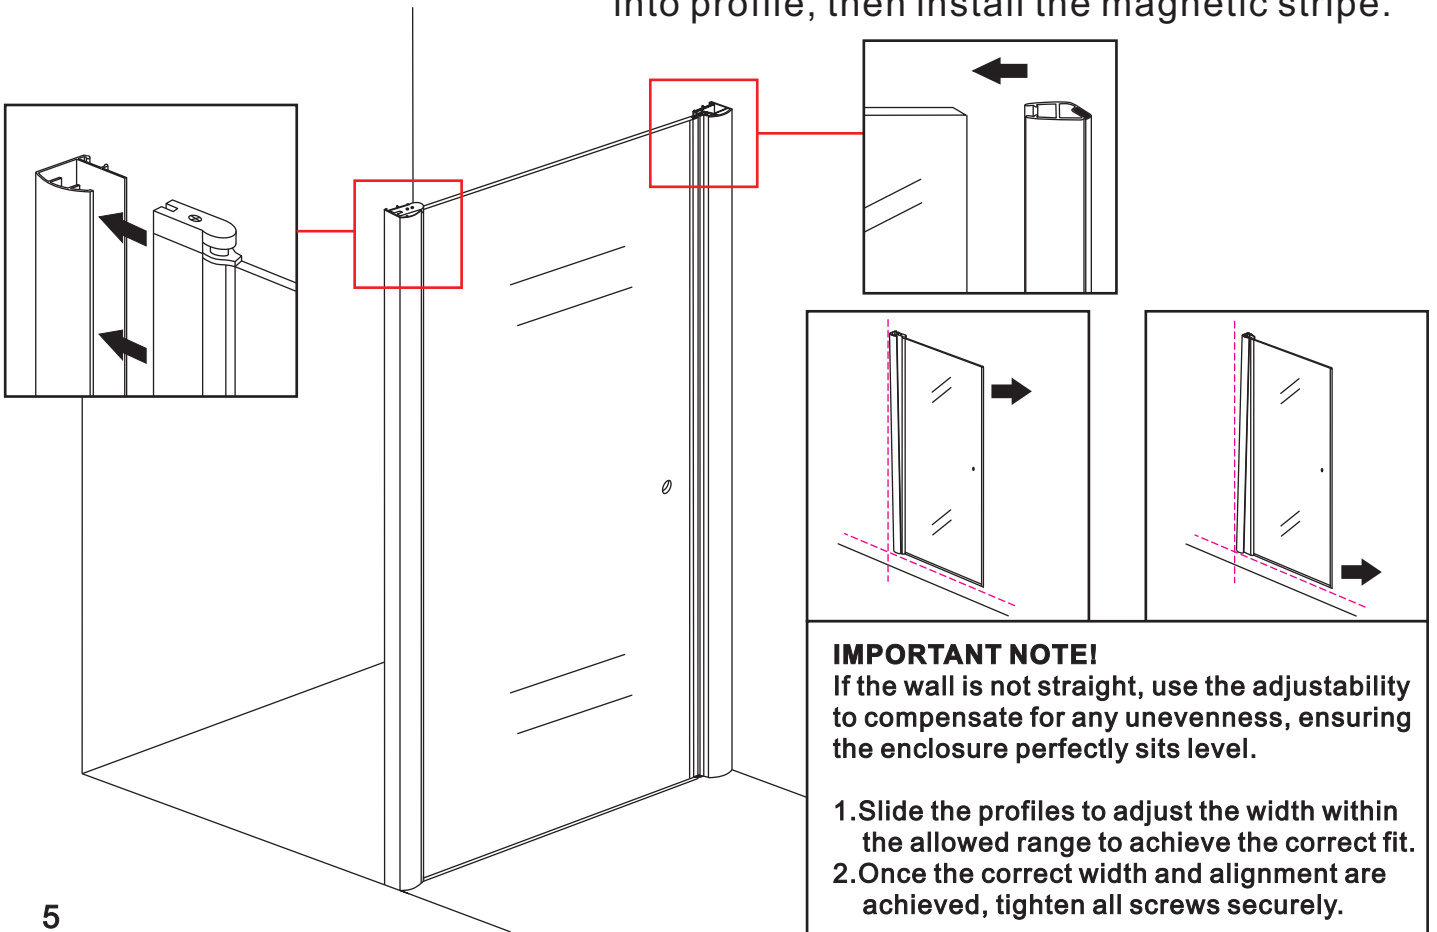


5

Install the decorate profile: install the connect buckle, insert the decorate profile into buckle as picture shows, then install the top decorate cap.

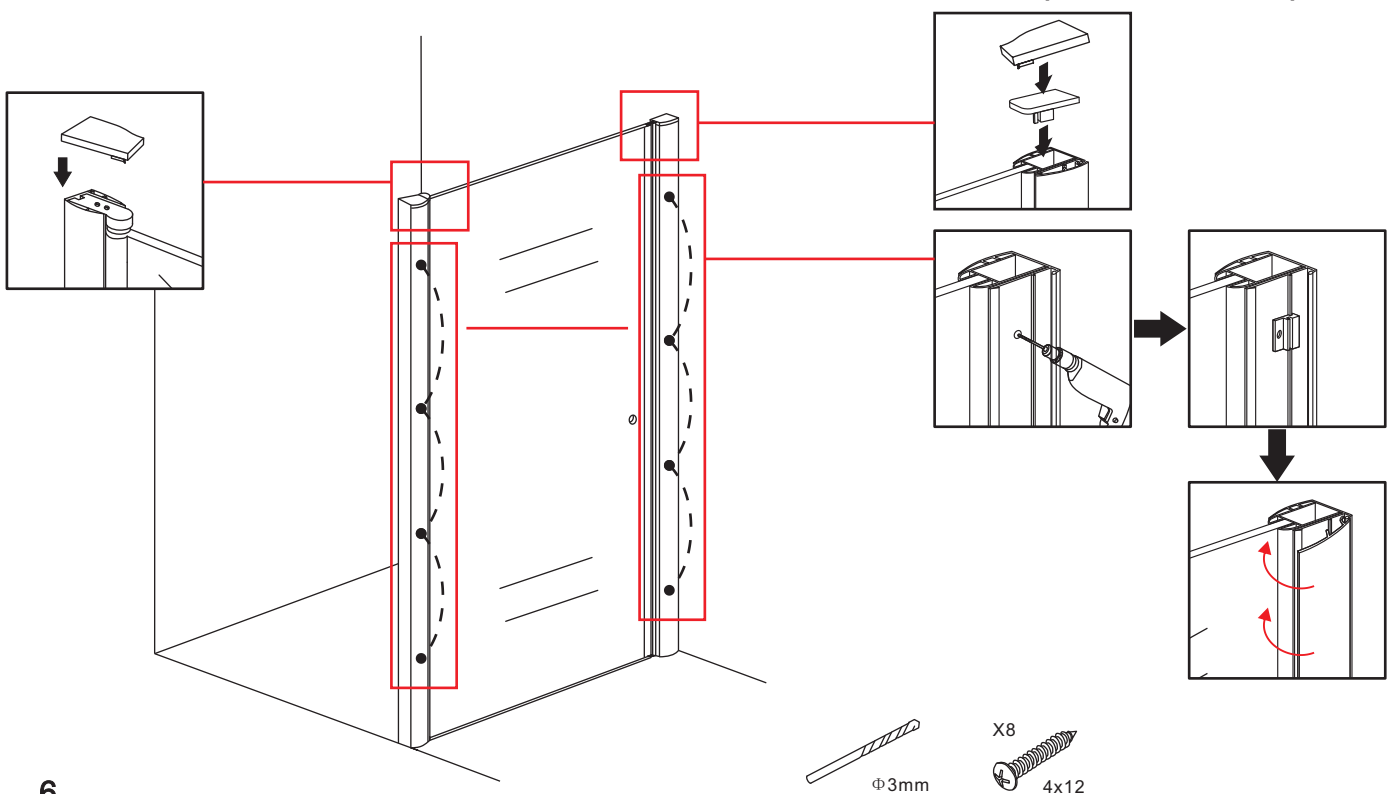


6

Intall the handle.

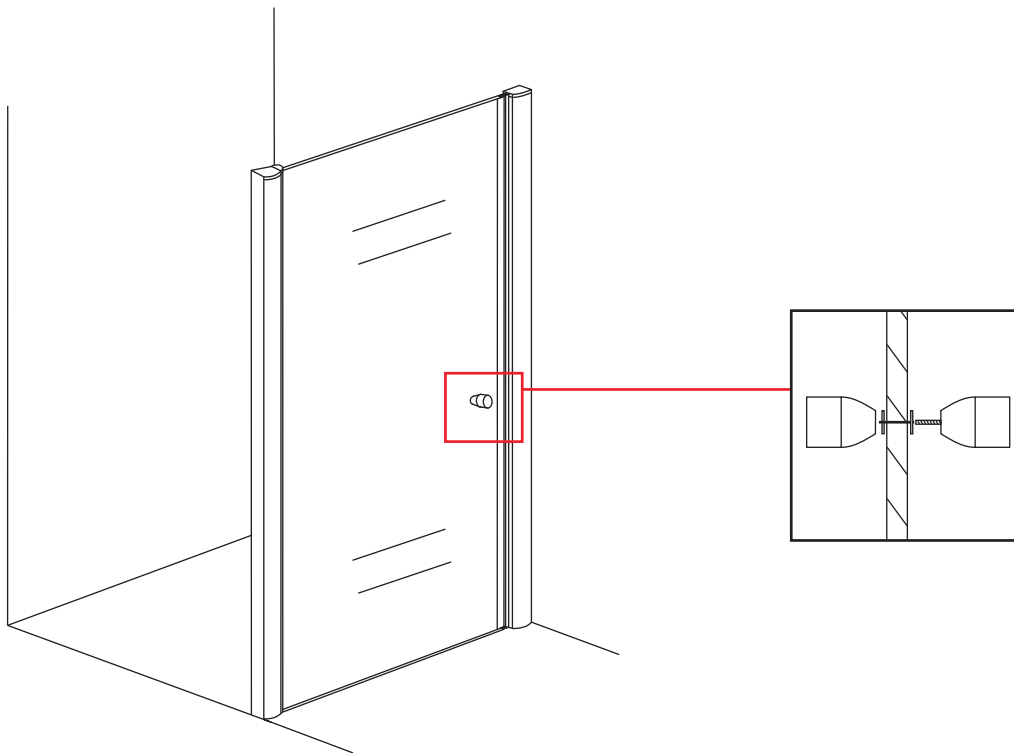

7

take the glue, please keep dry until 24 hours.

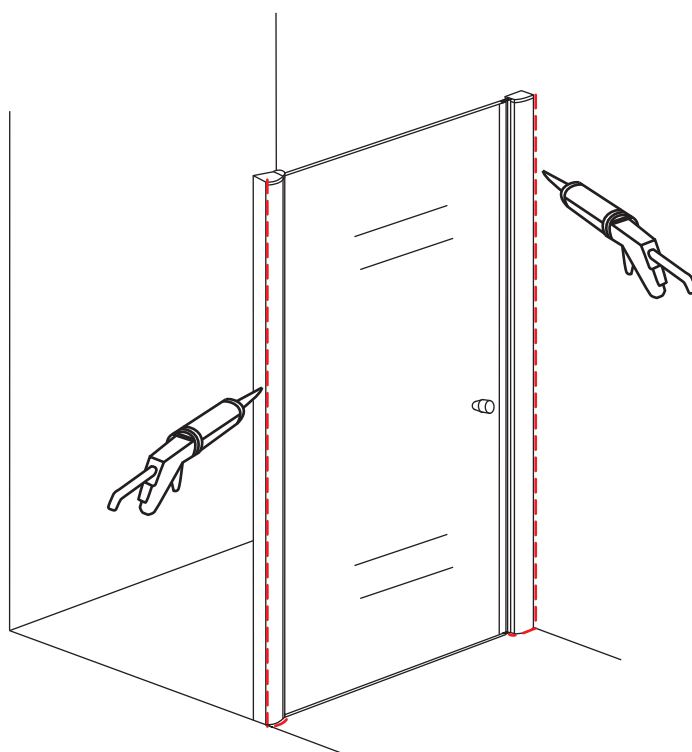

8