

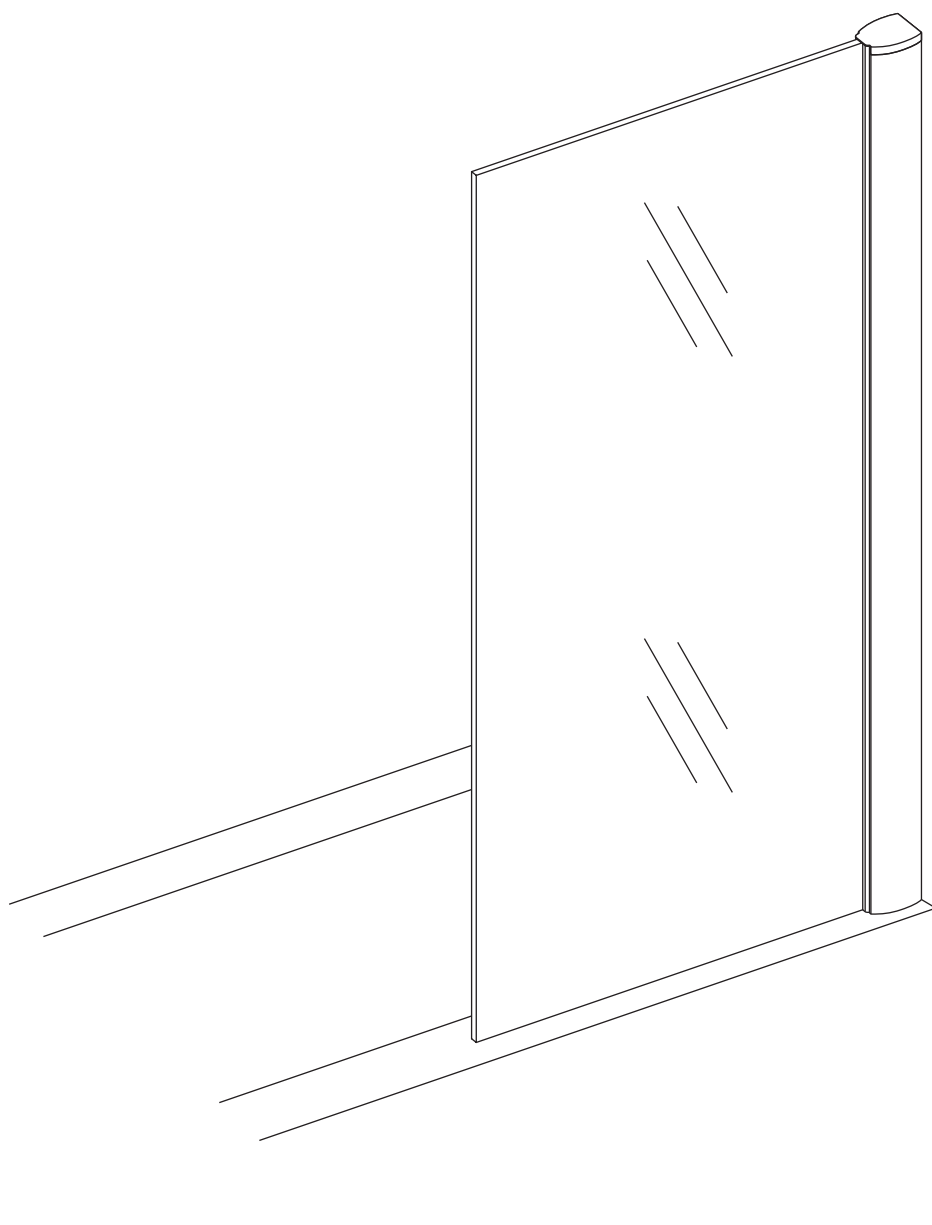


INSTALLATION MANUAL

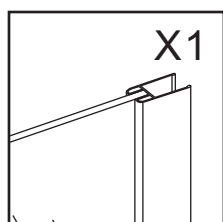


CR-S031

RoHS **CE** ISO9001:2008

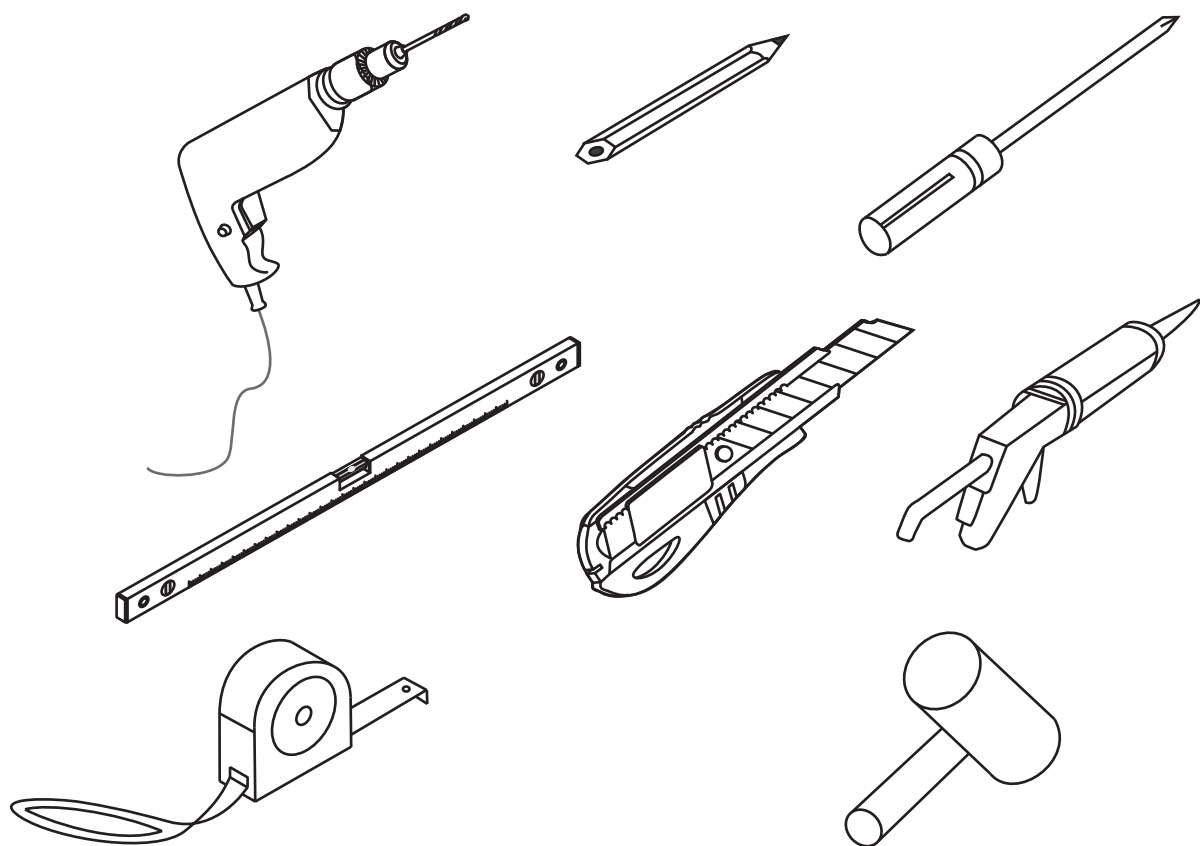


X1

GLASS

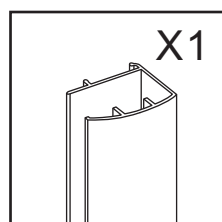


X1

KQ-22

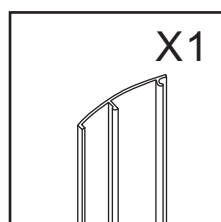


X1

BB-09

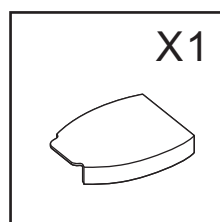


X1

PJ-4679

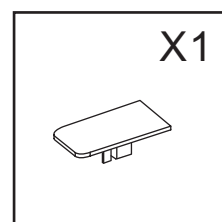


X1

PJ-4677

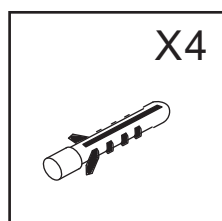


X4



PJ-4606

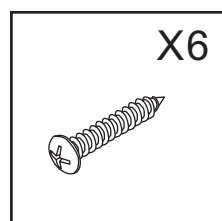



X6



Install the wall profile: according the line to install the profile
notice:put the profile in middle of line.

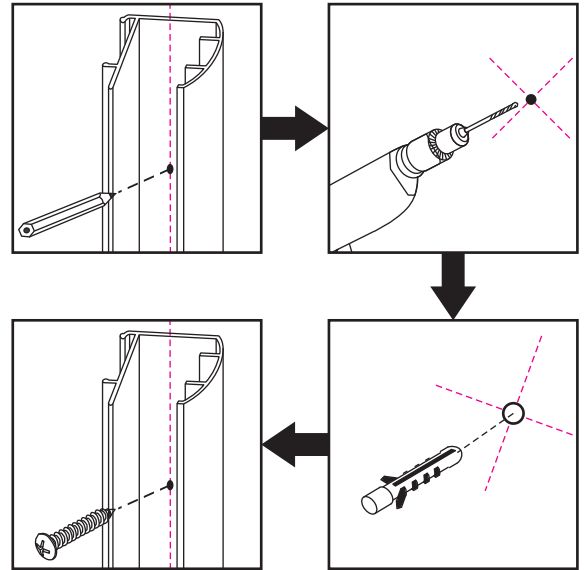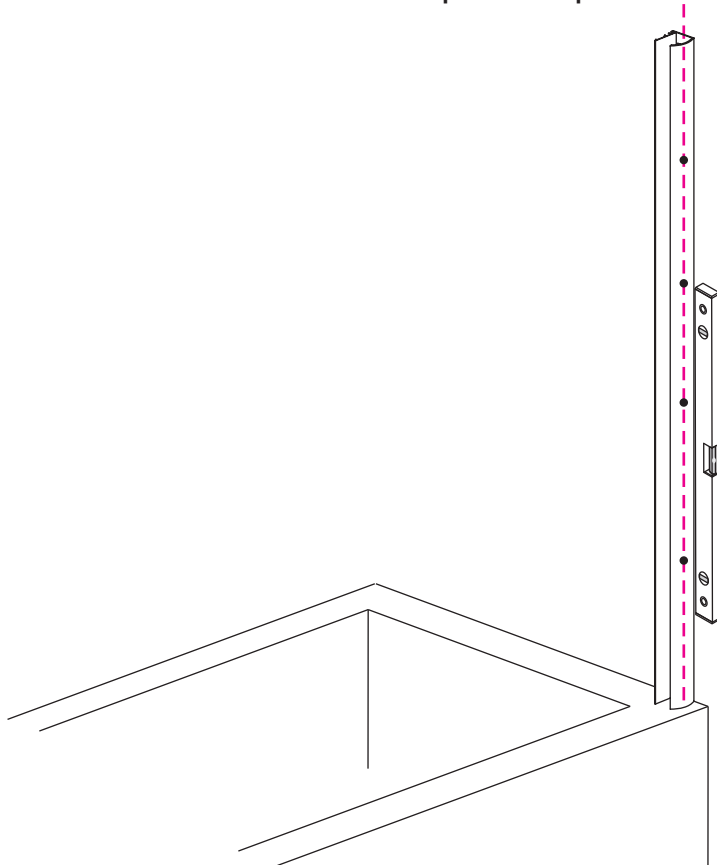


insert the glass into wall profile.

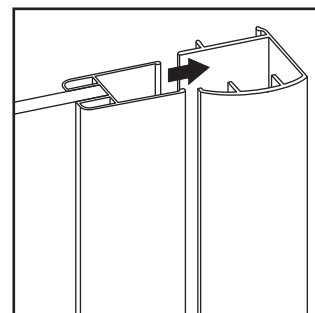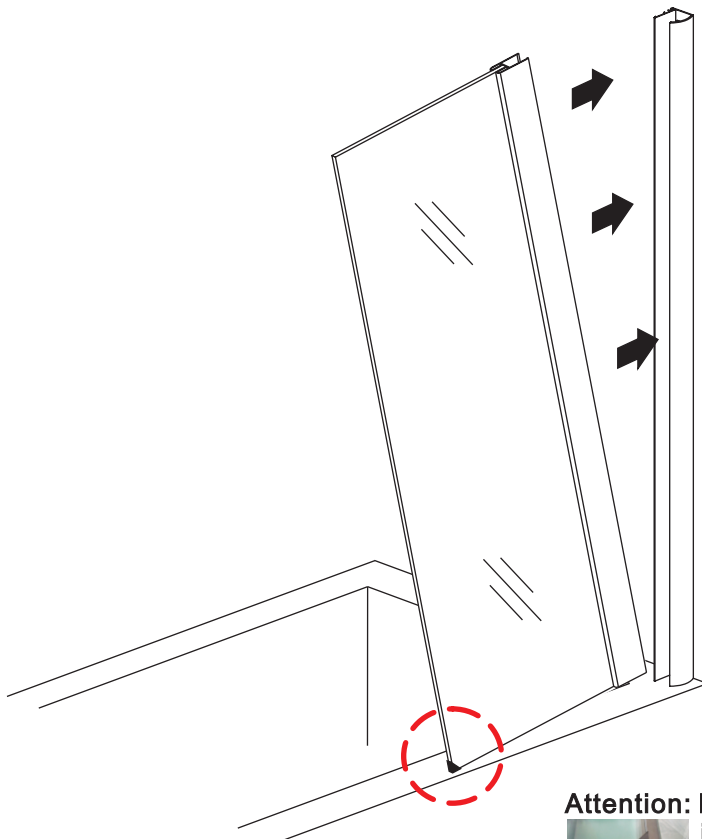

Attention: Do not remove the Black corner protector until insert well the glass into the wall profiles and fit well to prevent glass broken and splitted.



Install the decorate profile: install the connect buckle, insert the decorate profile into buckle as picture shows, then install the top decorate cap.

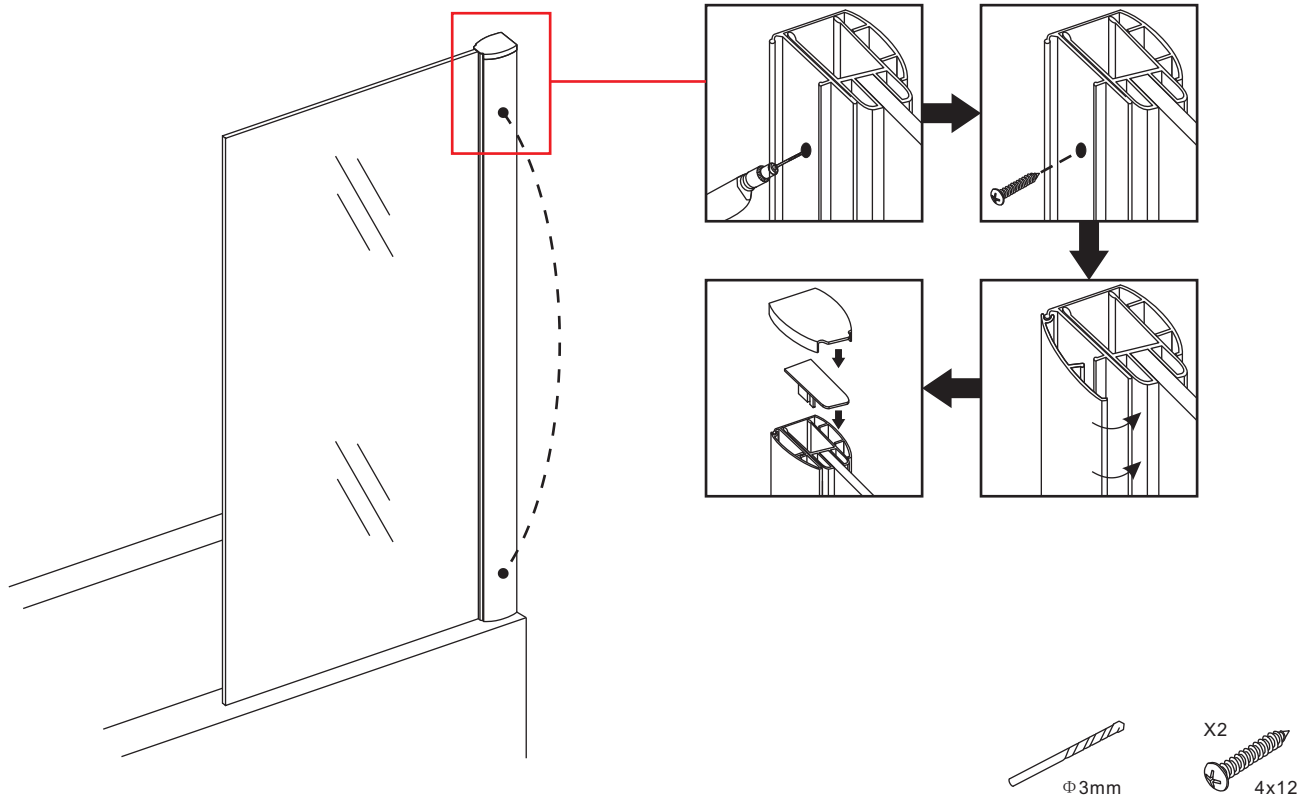

Take glue: please keep dry until 24 hour.

