

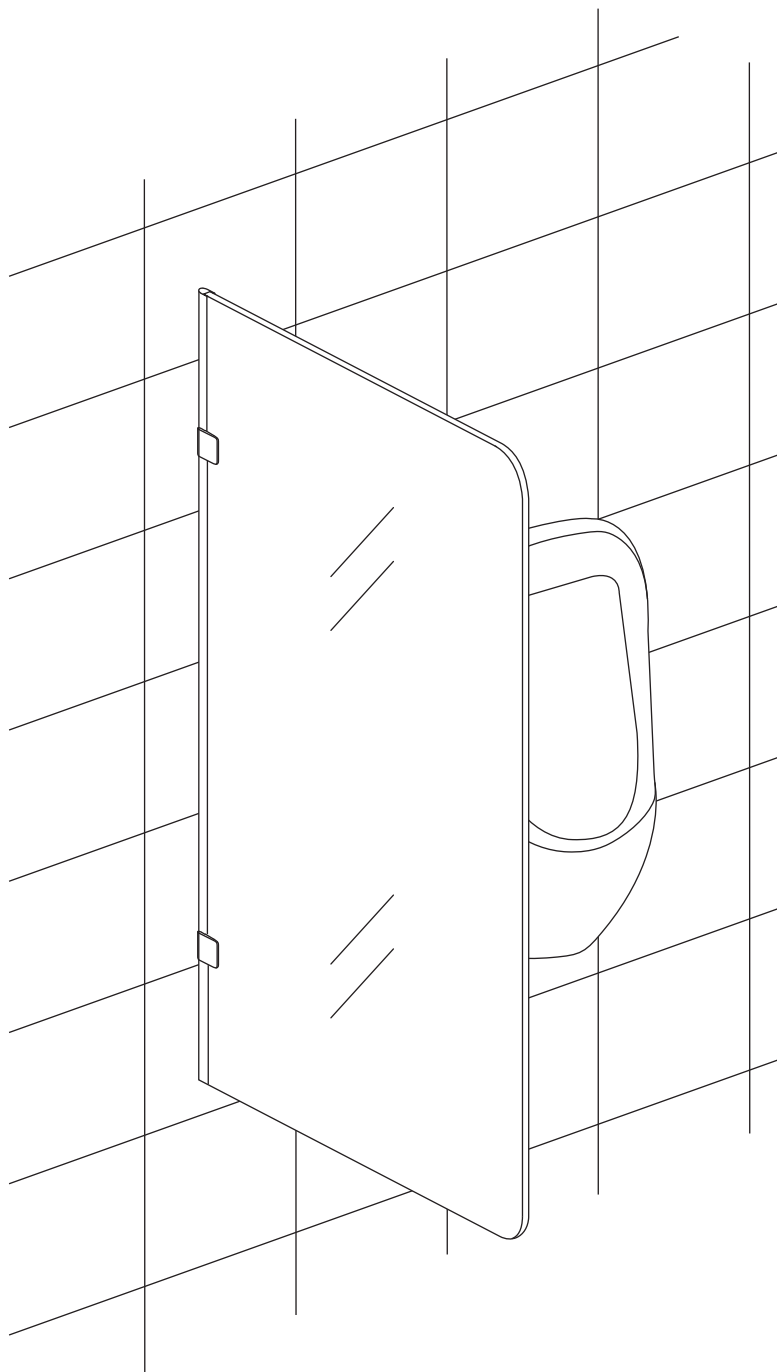


INSTALLATION MANUAL

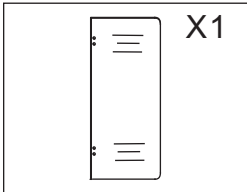


CR-W001/CR-B001

RoHS **CE** ISO9001:2008

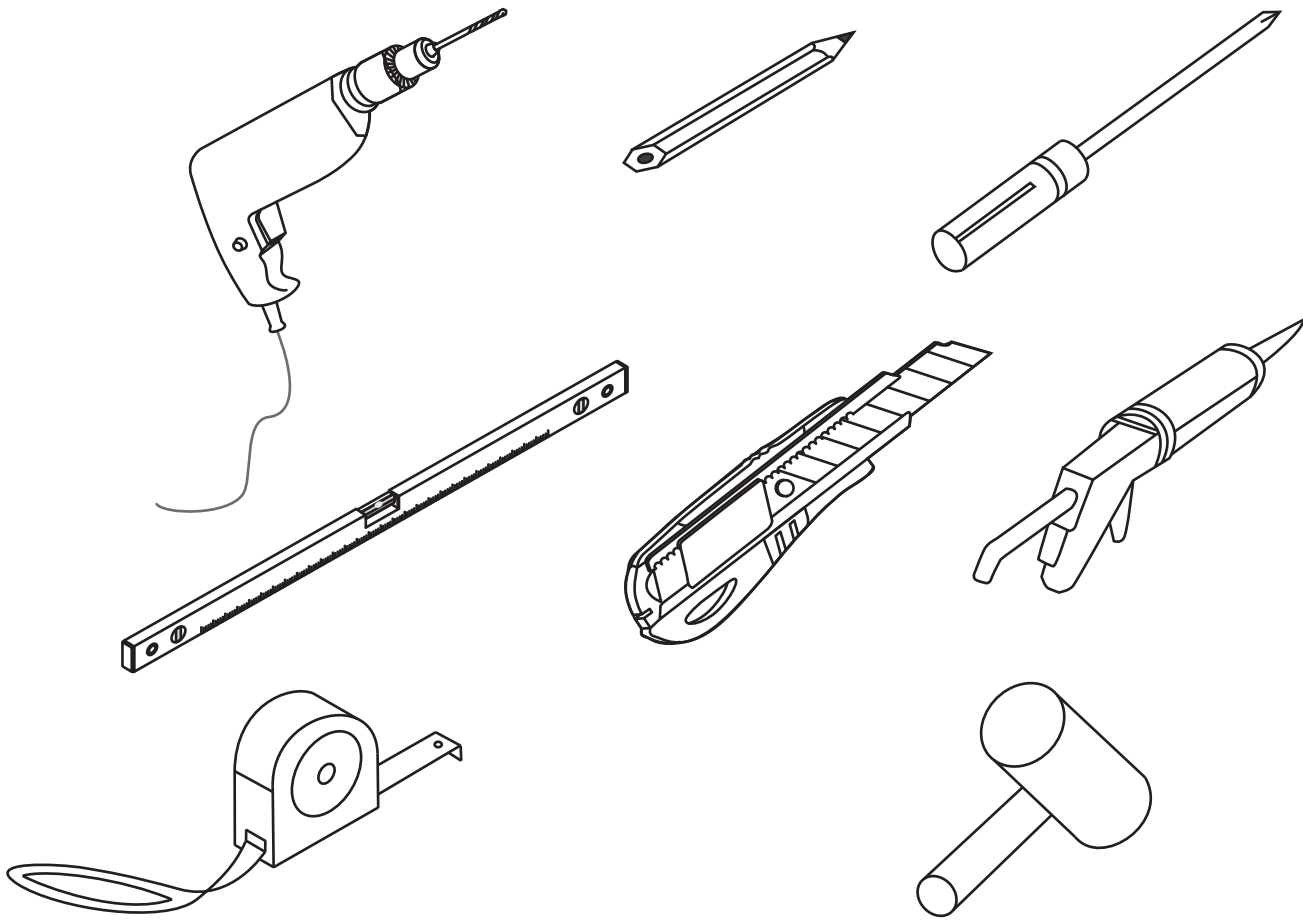


X1

GLASS

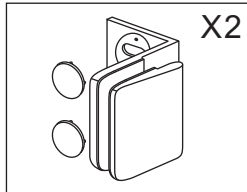


X2

PJ-4069

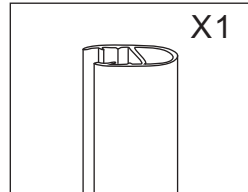


X1


8B-5

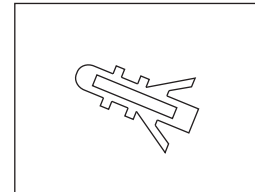


PJ-4606

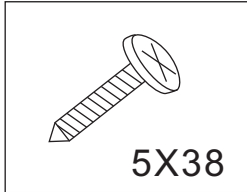

5X38

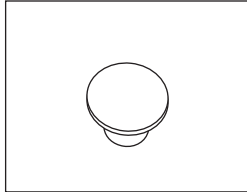


Install the U-type gasket.
Install the hinge.

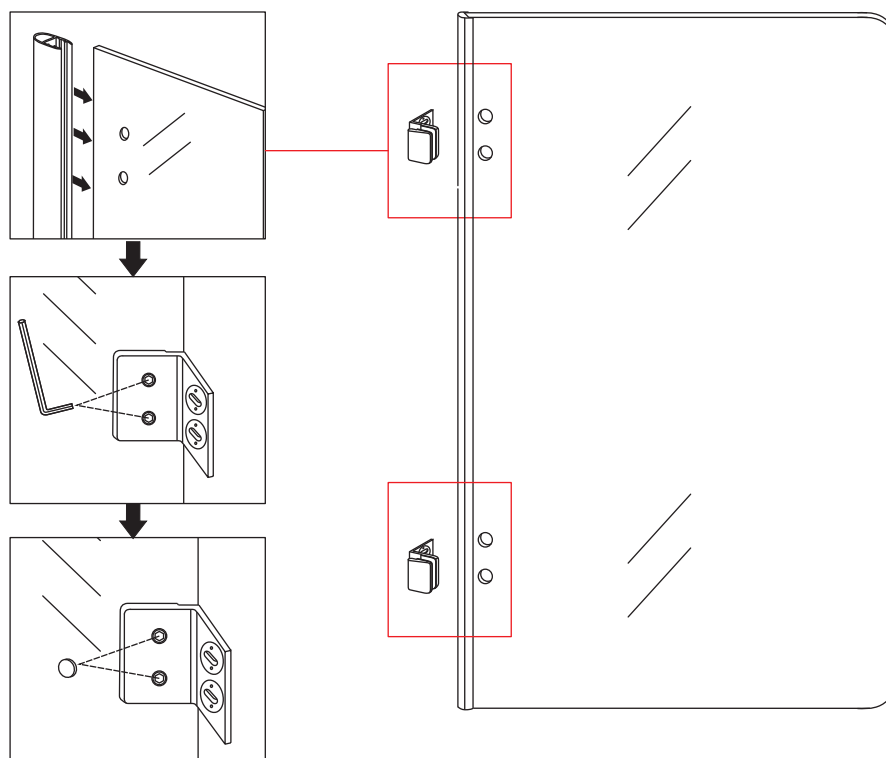

1

Install the toilet compartments onto the wall.

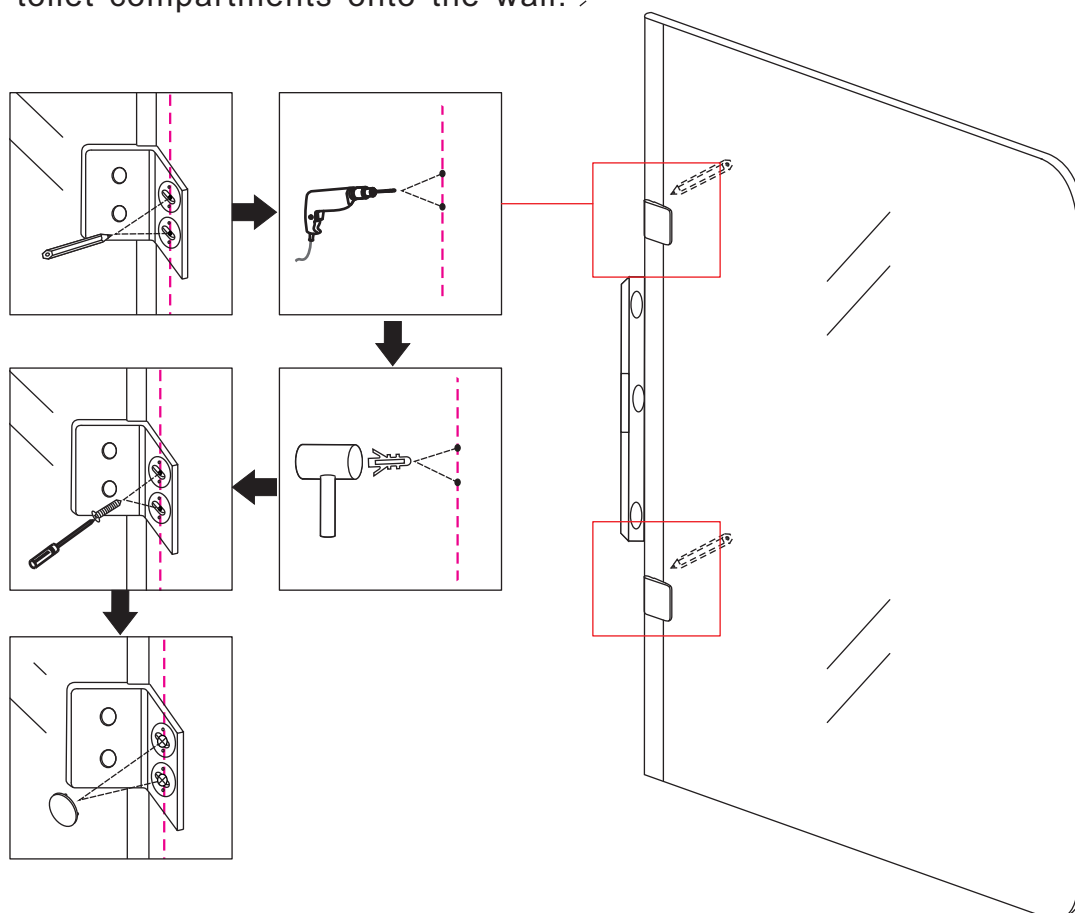

2

Take the glue.

